



SL-10 COMPONENTS

#	PART NUMBER	DESCRIPTION
1	080-PI	Hydraulic System for SL-10 Cargo Bars with End Guide
2	080-R131	Pump Handle Assembly
3	080-A145-100	Bracket Screw (Zinc)
	080-A145SS-100	Bracket Screw (Stainless Steel)
4	080-H113	Release Button Cover
5	080-R010	Release Button Assembly with Cover
6	080-A051-50	Roll Pin 1/8" x 1-1/4" for Main Tube (Stainless Steel)
7	080-PRDP	Articulating Foot with Power Rod
8	080-R028	Articulating Foot for Extension Tube End with Roll Pin
9	080-R027	Fixed Foot for Extension Tube End with Roll Pin
10	080-A050-50	Roll Pin 1/8" x 1" for Foot (Zinc)
11	080-R021	End Guide Assembly
12	080-A151	Snap Button (Zinc)
	080-A151SS	Snap Button (Stainless Steel)